 


DS360 optic change


1) Unlock and remove the door

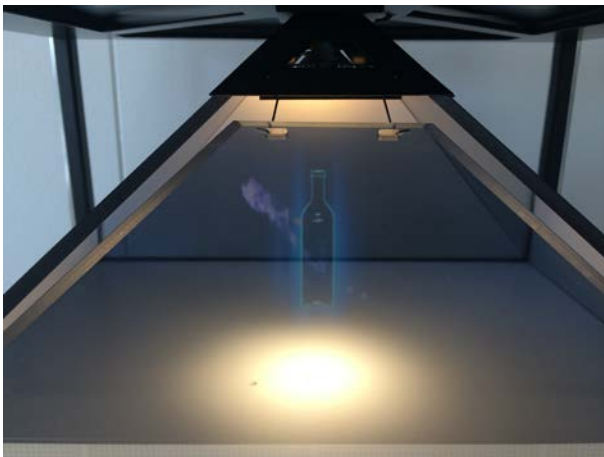

2) Loosen the front optic so it hangs in the metal spring from above



3) Remove the front optic by squeezing the metal spring gently from the inside

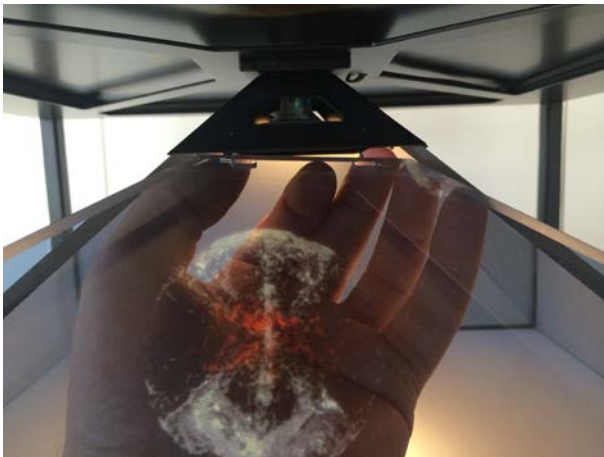

4) The spring should remain



5) Pull out the white bottom plate



6) All 3 side plates should now be removed. Each side plate is fixed with 2 M5 self locking nuts from the inside. When you remove those 2 nuts, the side plate can be easily be removed, and that side optic can be removed as well.





- 7) **Important:** When remounting the side plates, make sure note to over-tighten the nuts, as you might damage the aluminum and create bumps on the outside surface. Preferably use a machine with the screw torque setting **5**.

