



DREAMOC POP3 SMART FRAME STAND-3 – USER MANUAL

VERSION 1.0





Package contains

- 12x aluminum profiles
- Umbraco key
- Fork spanner
- 12 x self-tapping screws
- Velcro tape

Assembling the stand

1. Connect the aluminum profiles by locking them together as shown in the images below. Tighten the screws to secure the profiles together with the umbraco key. Make sure to use the profiles with the extra 6 holes for the top of the stand, to place the displays on later.

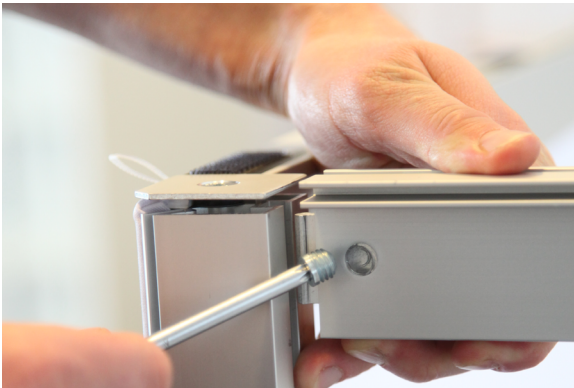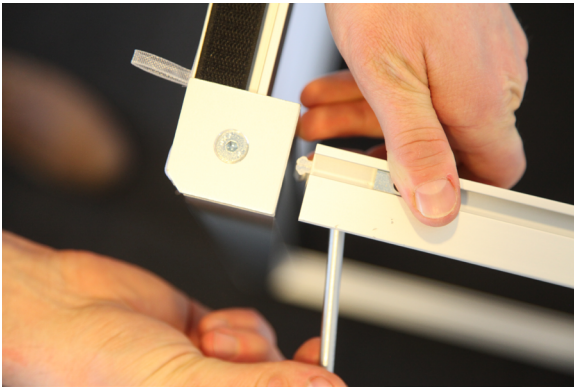

2. When the stand frame is assembled, adjust the feet if needed and tighten them with the fork spanner.
3. To secure the displays on the stand, cut and place strips of the velcro tape on the top aluminum profiles, as shown in the example image below. Then place the other half of the pieces underneath the displays to fit.
4. Finish by mounting the self-tapping screws from underneath and up into the bottom of the displays, going through the pre-drilled holes in the aluminum profiles.



5. Mount the stand print on each side by pressing the silicone seam the into the external groove of the aluminum profiles. Begin with the four corners, and then press in the remaining parts. This method secures a tight and even fit to the stand frame.



Storing the stand prints for later use

- The stand prints need to be completely dry before storing them away.
- Fold them backside against backside
- Place sheets of plastic/paper where the printed parts meet.
- Avoid too many creases.
- Avoid placing too many stand prints together in the same package.

Be aware that the stand print is a coated fabric that might rub off.

Placement

The Dreamoc POP3 Smart Frame Stand-3 must be placed on a horizontal, stable and plane surface. The stand must be fitted with sufficient ballast.

Do not install the stand in narrow passageways or other places where a lot of people and equipment has to pass close by, thereby risking collisions that might cause the stand to tip over causing human injuries and damage to property.